



$2 \times \phi 22 \text{ m} \times 605 \text{ mm} = 1210 \text{ mm} \rightarrow 1500 \text{ mm}$
 $\phi 19 \text{ mm} = 970 \text{ mm} \rightarrow 1000 \text{ mm}$
 $(7 \times 50) \times 190 \text{ mm} \times 2 = 400 \rightarrow 500 \text{ mm}$
 $(2 \times 25) \times 100 \text{ mm} \times 2 \times 2 = 400 \rightarrow 500 \text{ mm}$

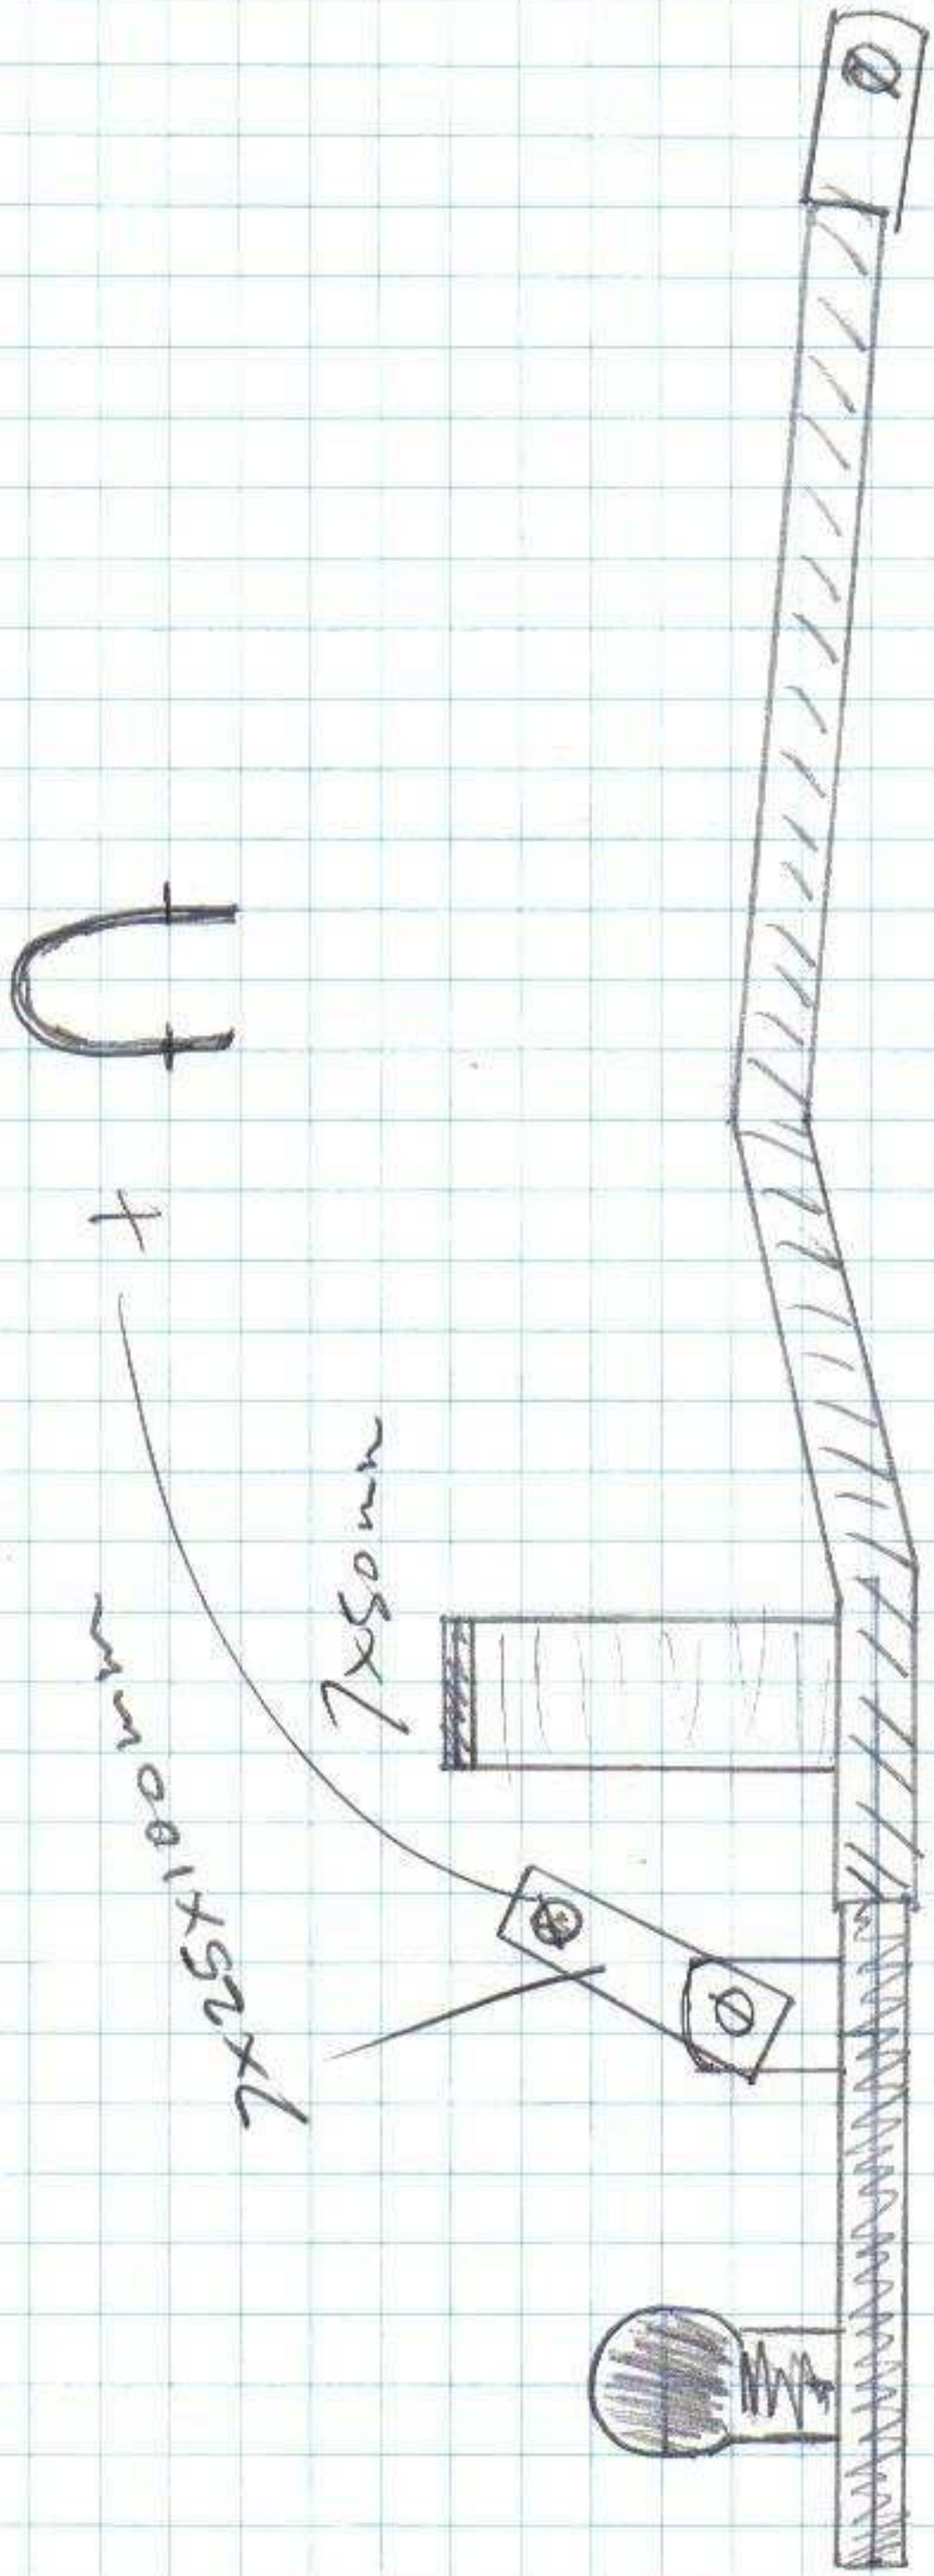

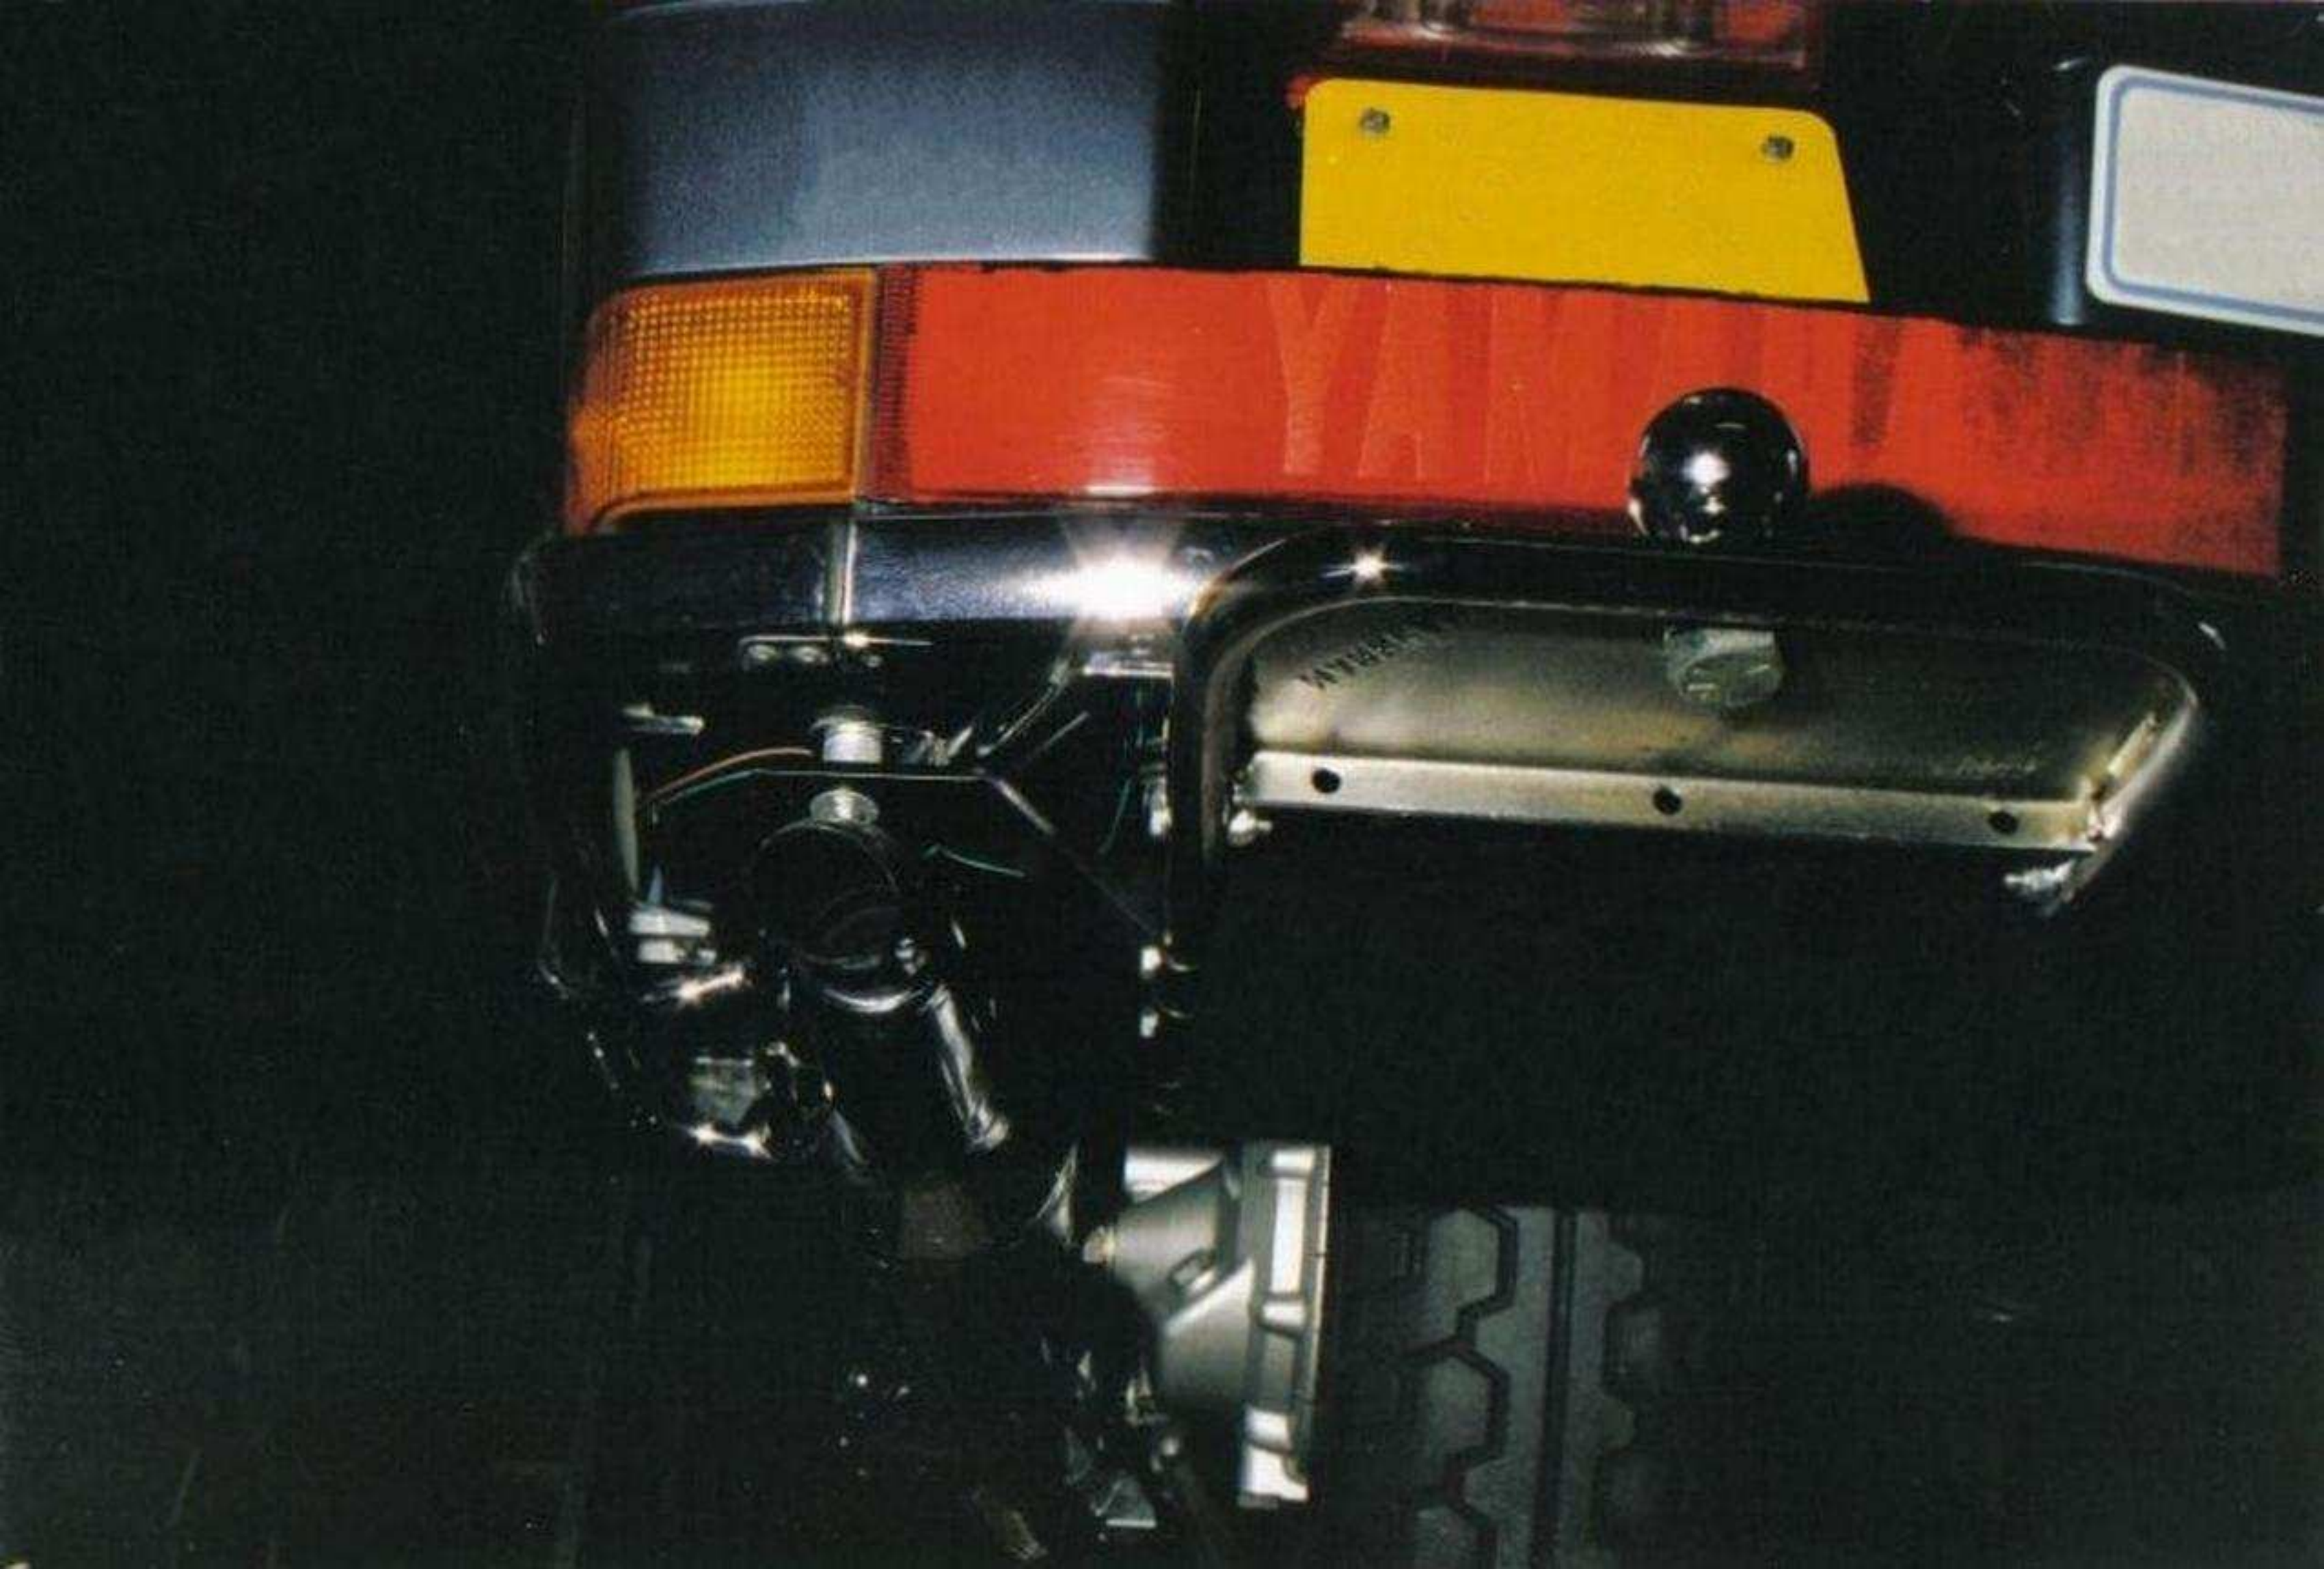





PLEASE READ THE INSTRUCTIONS CAREFULLY
BEFORE USING THIS MOTORCYCLE. ALWAYS
WEAR YOUR SEATBELT AND HELMET.
NEVER DRINK AND DRIVE.
ALWAYS WEAR YOUR SAFETY GEAR.
ALWAYS WEAR YOUR SEATBELT.
ALWAYS WEAR YOUR HELMET.

Harley-Davidson

1200041



